



 




 



 
 
 


 


 
 
 


 
 

 



 

 

 

 

 

 

 


 
 

 


 
 

 


 


 
 

 
 




Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol -
	Source		AV		P+		Ch +
	1		1		P-		Ch -
	2		2		Menu		Menu
	3		3		Q.Menu		D. Menu
	4		4		Back		Back
	5		5		Exit		Exit
	6		6		OK		Ok
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	TV		TV/R		i/Info		Info
	Recall		Pre Ch		Music/Photo/Phot		Options
	Mute		Mute		Guide		Guide
	Internet		Smart		[≡]/Text		Text
	Vol+		Vol +		*/O		Format





Original	Replacement	Original	Replacement
 */Q	 3D		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Lang	 Dual		
 [≡]..	 Subt		
 Rec	 Rec		
 [-o-]	 Eject		
 Play	 Play		
 Stop	 Stop		
 Pause	 Pause		
 <<	 <<		
 >>	 >>		

