



| Original | Replacement |
|---|-------------|
|  | Power |
|  | Source |
|  | 1 |
|  | 2 |
|  | 3 |
|  | 4 |
|  | 5 |
|  | 6 |
|  | 7 |
|  | 8 |
|  | 9 |
|  | TV |
|  | 0 |
|  | Recall |
|  | V+ |
|  | Mute |
|  | P+ |

| Original | Replacement |
|---|----------------|
|  | V- |
|  | World/Internet |
|  | P- |
|  | Menu |
|  | Q.Menu |
|  | Up |
|  | Left |
|  | OK |
|  | Right |
|  | Down |
|  | Back |
|  | Exit |
|  | i |
|  | Music/Camera |
|  | TV Guide |
|  | */O |
|  | */Q |

| Original | Replacement |
|---|-----------------------|
|  | Vol- |
|  | Smart / List |
|  | CH- / Page- |
|  | Menu / Home |
|  | D.Menu / Top |
|  | Up |
|  | Left |
|  | OK |
|  | Right |
|  | Down |
|  | Back / Return |
|  | Exit / Cancel / Clear |
|  | Info / Angle |
|  | Display / Media |
|  | Guide / EPG / -/-- |
|  | Shift + 1 |
|  | Shift + 2 |



