 



 










 
 





 


 





 



 
 


 


 


 
 



 


 
 





 











Original		Replacement		Original		Replacement	
	Power		Power		P+		CH +
	Source		SRC		P-		CH -
	1		1		CH List		TV/R
	2		2		Content		Shift + VOD
	3		3		Menu		MENU
	4		4		Guide		-/-- / EPG
	5		5		Tools		OPT+
	6		6		Info		INFO
	7		7		Return		BACK
	8		8		Exit		EXIT
	9		9		Up		UP
	0		0		Down		DOWN
	TTX/MIX		TEXT		Right		RIGHT
	PRE-CH		P/C / FAV		Left		LEFT
	Vol+		VOL +		Enter		OK
	Vol-		VOL -		Red		Red (A)
	Mute		MUTE		Green		Green (B)





Original		Replacement		Original		Replacement	
	Yellow		Yellow (C)				
	Blue		Blue (D)				
	Media. P		MEDIA				
	Internet/@TV		VOD				
	Dual I-II		Audio				
	AD		WIDE				
	P.Size		V-FOR				
	Subt.		Subt.				
	<<		Rewind				
	Pause		Pause				
	>>		Fast Forward				
	Rec		Rec				
	Play		Play				
	Stop		Stop				

