



 









 





 





 





 





Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 HDMI	 Shift + 0
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TTX/MIX	 Text / Goto
 0	 0
 PRE-CH	 Fav / Marker / PC
 Vol+	 Vol+
 Mute	 Mute / Dimmer

Original	Replacement
 PR+	 CH+ / Page+
 Vol-	 Vol-
 CH List	 Display / Media
 PR-	 CH- / Page-
 Menu	 Menu / Home
 Smart Hub	 Smart / List
 Guide	 Guide / EPG / -/--
 Tools	 Setup / OPT /
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red/A	 Red / Netflix / Search





Original	Replacement	Original	Replacement
Green/B	Green / APP / Repeat		
Yellow/C	Yellow / YouTube / Repeat		
Blue/D	Blue / Prime Video / Random		
Family Story	Picture / Format		
Search	Shift + Red / Netflix /		
3D	Shift + 3		
Support	D.Menu / Top		
P.Size	Zoom / Size		
AD/Subt	Subtitle / EQ		
<</I<<	<< / Tune-		
<</I<<	I<< / Preset-		
Pause	Pause / Step / Freeze		
>>/>>I	>> / Tune+		
>>/>>I	>>I / Preset+		
Rec	Rec / Rec Mode		
Play	Play / Slow		
Stop	Stop / Hold		

Original	Replacement

