












 







 



 



 


 




Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TTX/MIX	 Text / Goto
 0	 0
 PRE-CH	 Back / Return
 VOL+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+

Original	Replacement
 VOL-	 Vol-
 CH.LIST	 Display / Media
 CH.LIST	 Shift + Smart / List
 PR-	 CH- / Page-
 Menu	 Menu / Home
 Smart HUB	 Smart / List
 Guide	 Guide / EPG / -/--
 Tools	 Setup / OPT /
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Shift + Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red/A	 Red / Netflix / Search





	Original	Replacement	Original	Replacement
	Green/B	Green / APP / Repeat		
	Yellow/C	Yellow / YouTube / Repeat		
	Blue/D	Blue / Prime Video / Random		
	E-Manual	D.Menu / Top		
	3D	Picture / Format		
	AD/Subt	Subtitle / EQ		
	Stop	Stop / Hold		
	I<<	I<< / Preset-		
	<<	<< / Tune-		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		
	>>	>> / Tune+		
	>>I	>>I / Preset+		

