



Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	TV		TV/Radio /		Source		AV / Input / RDS
	1		1		PR-		CH- / Page-
	2		2		CH List		Smart / List
	3		3		Menu		Menu / Home
	4		4		FAV CH		Fav / Marker / PC
	5		5		Tools		Setup / OPT /
	6		6		Return		Shift + Back / Return
	7		7		Up		Up
	8		8		Left		Left
	9		9		Enter		OK
	[ ]		Display / Media		Right		Right
	0		0		Info		Info / Angle
	PRE-CH		Back / Return		Down		Down
	Vol+		Vol+		Exit		Exit / Cancel / Clear
	Mute		Mute / Dimmer		Red		Red / Netflix / Search
	PR+		CH+ / Page+		Green		Green / APP / Repeat





Original	Replacement
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Text / Goto
	 Sound / Title
	 Zoom / Size
	 Audio / Lang I/II
	 Guide / EPG / -/--
	 Subtitle / EQ
	 << / Tune-
	 Pause / Step / Freeze
	 >> / Tune+
	 Rec / Rec Mode
	 Play / Slow
	 Stop / Hold

Original	Replacement

