



 



 





















 



















 



 







 



 
 




Original	Replacement	Original	Replacement
 Power	 Power	 P+	 CH+ / Page+
 Source	 AV / Input / RDS	 Vol-	 Vol-
 HDMI	 Shift + 0	 CH.List	 Smart / List
 1	 1	 P-	 CH- / Page-
 2	 2	 Media.P	 Display / Media
 3	 3	 Menu	 Menu / Home
 4	 4	 Guide	 Guide / EPG / -/-
 5	 5	 Tools	 Setup / OPT /
 6	 6	 Up	 Up
 7	 7	 Info	 Info / Angle
 8	 8	 Left	 Left
 9	 9	 Enter	 OK
 TTX/MIX	 Text / Goto	 Right	 Right
 0	 0	 Return	 Back / Return
 PRE-CH	 Fav / Marker / PC	 Down	 Down
 Vol+	 Vol+	 Exit	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer	 Red	 Red / Netflix / Search

Original	Replacement	Original	Replacement
 Power	 Mute / Dimmer	 SHIFT	 SHIFT
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG UI	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 PICTURE	 ZOOM	 SLEEP	 TV RADIO
 TOP MENU	 OPT-TOOLS	 GOTO	 RDS
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 MENU	 INFO
 OK	 OK	 OK	 OK
 EXIT	 EXIT	 EXIT	 EXIT
 VOL+	 SMART	 MEDIA	 CH PAGE
 VOL-	 DISPLAY	 DISPLAY	 CH PAGE
 TV	 DVD	 CD - STB	 CD - STB
 1	 TAPE	 TUNER	 TUNER
 4	 AUX - HDD	 USB	 BLUETOOTH
 5	 HDMI - SAT	 PC	 PC
 7	 GUIDE EPG	 0	 FAV MARKER
NETFLIX	APP	YouTube	Prime Video
SEARCH	REPEAT	REPEAT A-B	RANDOM
www.mandis.tv			



