

 

 

 

 

 

 

 

 



 

 

 

 

 

 

 

 
 
 

 







 



 



 

 

 

 

 








Original		Replacement		Original		Replacement	
	Power		Power		PC		Fav / Marker / PC
	Source		AV / Input / RDS		Vol+		Vol+
	1		1		P+		CH+ / Page+
	2		2		Mute		Mute / Dimmer
	3		3		Vol-		Vol-
	4		4		P-		CH- / Page-
	5		5		Menu		Menu / Home
	6		6		Exit		Exit / Cancel / Clear
	7		7		Up		Up
	8		8		Left		Left
	9		9		Enter		OK
	0		Guide / EPG / -/--		Right		Right
	PRE-CH		0		Down		Down
	TV		Back / Return		[≡+]/PIP		Play / Slow
	CH.MGR		Display / Media		[≡?]/Info		Info / Angle
	Sleep		Smart / List		TTX/MIX		Text / Goto
			Sleep / Timer		Red / P.Mode		Red / Netflix / Search



