



 







 













 



 
 
















 

 







 





 







Original	Replacement	Original	Replacement
 Power	 Power	 P+	 CH+ / Page+
 Tv/DTV	 TV/Radio /	 Vol-	 Vol-
 Source	 AV / Input / RDS	 P-	 CH- / Page-
 1	 1	 Guide	 Guide / EPG / -/--
 2	 2	 Menu	 Menu / Home
 3	 3	 W.Link	 Display / Media
 4	 4	 Tools	 Setup / OPT /
 5	 5	 Return	 Back / Return
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 Enter	 OK
 9	 9	 Right	 Right
 -/--	 Shift + Guide / EPG / -/--	 Info	 Info / Angle
 0	 0	 Down	 Down
 PRE-CH	 Fav / Marker / PC	 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+	 Red	 Red / Netflix / Search
 Mute	 Mute / Dimmer	 Green	 Green / APP / Repeat



