

 
 


 


 
 







 

 



 

 
 




 
 




Original	Replacement
 Power	 Power
 TV	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Enter	 Guide
 PRE-CH	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Original	Replacement
 P+	 Ch +
 P-	 Ch -
 Source	 AV
 CH.List	 List
 FAV.CH	 Shift + Pre Ch
 Tools	 Options
 Menu	 Menu
 Return	 Back
 Internet	 Smart
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Red	 Red
 Green	 Green





Original		Replacement		Original		Replacement	
	Yellow		Yellow				
	Blue		Blue				
	TTX/MIX		Text				
	Media.P		Media				
	Content		Subt				
	Info		Info				
	P.Size		Format				
	Dual/I-II		Dual				
	<<		<<				
	Pause		Pause				
	>>		>>				
	Rec		Rec				
	Play		Play				
	Stop		Stop				

