



Original	Replacement	Original	Replacement
 Power	 Power	 9	 9
 Open/Close	 Eject	 0	 0
 Demo/Dimmer	 Media	 CD Ripping	 Guide
 On/Off Timer	 AV	 Cancel	 Pre Ch
 Timer/Clock	 Shift + AV	 I<<	 I<<
 DVD	 Blue	 Step	 3D
 Tuner	 Yellow	 Pause	 Pause
 Port	 Green	 >>I	 >>I
 AUX	 Red	 <<	 <<
 1	 1	 Stop	 Stop
 2	 2	 Play	 Play
 3	 3	 >>	 >>
 4	 4	 Vol+	 Vol +
 5	 5	 Vol-	 Vol -
 6	 6	 Mute	 Mute
 7	 7	 Audio	 Dual
 8	 8	 Tuning Up	 Ch +





Original	Replacement	Original	Replacement
 Tuning Down	 Ch -	 Echo	 Shift + TV/R
 Menu	 Menu	 Sleep	 Sleep
 Info	 Info	 Slow	 List
 Return	 Back	 Angle	 Options
 Exit	 Exit	 Mic Vol+	 Shift + Vol +
 Up	 Up	 Mic Vol-	 Shift + Vol -
 Down	 Down	 Remain	 Smart
 Right	 Right	 Zoom	 Shift + Eject
 Left	 Left	 Mo/ST	 Shift + Options
 Enter	 Ok		
 Repeat	 Text		
 A-B Repeat	 TV/R		
 Tuner Memory	 Rec		
 Subtitle	 Subt		
 DSP/EQ	 D. Menu		
 P.Bass	 Shift + Subt		
 P.Sound	 Format		

