

 





 
 
 

 




 
 

 


 
 


 
 

 
 


 
 
 
 


 
 


 




 



 
 


 

 

 
 









Original	Replacement
 Power	 Power
 Tv/AV	 AV
 Mute	 Mute
 Timer	 Shift + AV
 [.]/[≡?]	 3D
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/-/[≡0]	 Guide
 P↔P/[≡+]	 Pre Ch

Original	Replacement
 Menu	 Menu
 Sound	 Dual
 Picture	 Format
 ▼ A-B	 Options
 CH+	 Ch +
 CH-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 [≡◆]/Bass	 Subt
 TXT/TV	 Text
 S.SYS	 Smart
 Surround	 List





Original	Replacement	Original	Replacement
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

