






 

 
 
 
 
 

 






 
 





 

 






Original	Replacement
 Power	 Power
 Wide	 Format
 Mute	 Mute
 Tv/Source	 TV/R
 ▼ A-B	 Dual
 →←	 Smart
 [.] [Y] [≡?]	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 -/--/[≡O]	 Guide
 CS	 Pre Ch
 Red/Surround	 Red
 Green	 Green
 Yellow/Bass	 Yellow
 Blue/Timer	 Blue
 MENU [≡]	 Menu
 P↔P	 Back
 P▲	 Up
 P▲	 Ch +
 P▼	 Ch -
 P▼	 Down
 ▶	 Right
 ▶	 Vol +
 ◀	 Left
 F/OK	 Ok
 O/[≡x]	 Subt





