






 





 

 




 




Original	Replacement	Original	Replacement
 Power	 Power	 Info	 Info / Angle
 Mute	 Mute / Dimmer	 [I]/Menu	 Menu / Home
 Red	 Red / Netflix / Search	 Up	 Up
 Green	 Green / APP / Repeat	 Source	 AV / Input / RDS
 Yellow	 Yellow / YouTube / Repeat	 Left	 Left
 Blue	 Blue / Prime Video / Random	 OK	 OK
 << / [≡o]	 << / Tune-	 Right	 Right
 >> / [≡?]	 >> / Tune+	 Down	 Down
 I<< / [≡+]	 I<< / Preset-	 EPG	 Guide / EPG / -/-
 >>I / [≡..]	 >>I / Preset+	 Exit	 Exit / Cancel / Clear
 Play	 Play / Slow	 Vol+	 Vol+
 Pause	 Pause / Step / Freeze	 FAV	 Fav / Marker / PC
 Stop	 Stop / Hold	 CH+	 CH+ / Page+
 [≡i]	 Smart / List	 Vol-	 Vol-
 Text	 Text / Goto	 REP/Rec	 Rec / Rec Mode
 Subtitle	 Subtitle / EQ	 CH-	 CH- / Page-
 Freeze	 Shift + Pause / Step / Freeze	 1	 1










Original	Replacement	Original	Replacement
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Audio		Audio / Lang I/II
	0		0
	Recall		Back / Return





Original	Replacement	Original	Replacement
Power	 Power		
Mute	 Mute / Dimmer		
Play	 Play / Slow		
Pause	 Pause / Step / Freeze		
Stop	 Stop / Hold		
Rec	 Rec / Rec Mode		
<</Hold	 << / Tune-		
>>/Index	 >> / Tune+		
I<<	 I<< / Preset-		
>>I	 >>I / Preset+		
Nicam/A2	 Audio / Lang I/II		
Subtitle	 Subtitle / EQ		
Subpage	 Eject / Surround		
Size	 Zoom / Size		
Sleep	 Sleep / Timer		
DTV/Radio	 TV/Radio /		
Reveal	 D.Menu / Top		

Original	Replacement	Original	Replacement
TXT/MIX	 Text / Goto		
Menu	 Menu / Home		
Up	 Up		
Info	 Info / Angle		
Left	 Left		
Enter	 OK		
Right	 Right		
Cancel	 Exit / Cancel / Clear		
Down	 Down		
Back	 Back / Return		
Vol+	 Vol+		
List	 Smart / List		
CH+	 CH+ / Page+		
Vol-	 Vol-		
Mode	 Display / Media		
CH-	 CH- / Page-		
1	 1		

































Original	Replacement	Original	Replacement
2	DVD 2		
3	CD - STB 3		
4	VIDEO 4		
5	TAPE 5		
6	TUNER 6		
7	AUX - HDD 7		
8	USB 8		
9	BLUETOOTH 9		
EPG	GUIDE EPG	Guide / EPG / -/--	
0	HDMI - SAT 0		
FAV	PC FAV MARKER	Fav / Marker / PC	
Red	NETFLIX SEARCH	Red / Netflix / Search	
Green	APP REPEAT	Green / APP / Repeat	
Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat	
Blue	Prime Video RANDOM	Blue / Prime Video / Random	
<</Hold	SHIFT + HOLD	Shift + Stop /	
FAV-	SHIFT +	Shift + Left	

Original	Replacement	Original	Replacement
FAV+	SHIFT +	Shift + Right	
-/--	SHIFT +	Shift + Guide / EPG / -/--	


















Original	Replacement	Original	Replacement
Power	 Power	Up	 Up
Mute	 Mute / Dimmer	Info	 Info / Angle
Play	 Play / Slow	Left	 Left
Pause	 Pause / Step / Freeze	Ok	 OK
Stop	 Stop / Hold	Right	 Right
Rec	 Rec / Rec Mode	Exit	 Exit / Cancel / Clear
<</[Timer]	 << / Tune-	Down	 Down
>>/[≡?]	 >> / Tune+	Recall	 Back / Return
I<</[≡⇅]	 I<< / Preset-	Vol+	 Vol+
>>I/[≡...]	 >>I / Preset+	[≡i]	 Smart / List
Audio	 Audio / Lang I/II	Ch+	 CH+ / Page+
Subtitle	 Subtitle / EQ	Vol-	 Vol-
I<</[≡⇅]	 Zoom / Size	Ch-	 CH- / Page-
<</[Timer]	 Sleep / Timer	1	 1
Text	 Text / Goto	2	 2
Source/Av	 AV / Input / RDS	3	 3
[II]	 Menu / Home	4	 4

Original	Replacement	Original	Replacement
Power	 Power	Up	 Up
Mute	 Mute / Dimmer	Info	 Info / Angle
Play	 Play / Slow	Left	 Left
Pause	 Pause / Step / Freeze	Ok	 OK
Stop	 Stop / Hold	Right	 Right
Rec	 Rec / Rec Mode	Exit	 Exit / Cancel / Clear
<</[Timer]	 << / Tune-	Down	 Down
>>/[≡?]	 >> / Tune+	Recall	 Back / Return
I<</[≡⇅]	 I<< / Preset-	Vol+	 Vol+
>>I/[≡...]	 >>I / Preset+	[≡i]	 Smart / List
Audio	 Audio / Lang I/II	Ch+	 CH+ / Page+
Subtitle	 Subtitle / EQ	Vol-	 Vol-
I<</[≡⇅]	 Zoom / Size	Ch-	 CH- / Page-
<</[Timer]	 Sleep / Timer	1	 1
Text	 Text / Goto	2	 2
Source/Av	 AV / Input / RDS	3	 3
[II]	 Menu / Home	4	 4





Original	Replacement	Original	Replacement
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
Epg	 Guide / EPG / -/--		
0	 0		
Fav	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Freeze	 Shift + Pause / Step /		

