



















 


























 























Original	Replacement	Original	Replacement
 Open / Close	 Eject / Surround	 Subtitle	 Subtitle / EQ
 USB	 Shift + 8	 Angle	 Info / Angle
 Mute	 Mute / Dimmer	 Setup	 Setup / OPT /
 3	 3	 Menu	 Menu / Home
 4	 4	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 Enter	 OK
 8	 8	 Right	 Right
 6	 6	 Down	 Down
 7	 7	 >>	 >> / Preset+
 5	 5	 <<	 << / Tune-
 10+	 Guide / EPG / -/--	 >>	 >> / Tune+
 Time	 Sleep / Timer	 Play / Pause	 Play / Slow
 9	 9	 <<	 << / Preset-
 0	 0	 Vol -	 Vol-
 Language	 Audio / Lang I/II	 Vol +	 Vol+
 Title	 Sound / Title	 Stop	 Stop / Hold



