










 


 


 






 




Original	Replacement	Original	Replacement
 Open	 Power	 0	 0
 Open	 Eject	 Prog	 Sleep
 Repeat	 Text	 Goto	 Guide
 A-B	 Shift + Text	 Setup	 Options
 Angle	 3D	 PAL / NTSC	 Format
 Mute	 Mute	 OSD	 Info
 Audio	 Dual	 Up	 Up
 Subtitle	 Subt	 Left	 Left
 1	 1	 Enter	 Ok
 2	 2	 Right	 Right
 3	 3	 Down	 Down
 4	 4	 Menu	 Menu
 5	 5	 Remain	 Pre Ch
 6	 6	 Title	 Media
 7	 7	 Return	 Back
 8	 8	 Zoom	 Shift + Eject
 9	 9	 Clear	 Exit





	Original	Replacement	Original	Replacement
	I<<			
	>>I			
	Shuffle			
	Slow			
	<<			
	>>			
	Pause			
	Stop			
	Play			

