

 





 







 



 







 



 



 



 



 



 











 









 

 

 

 





Original	Replacement	Original	Replacement
 Power	 Power	 Index	 D.Menu / Top
 Mute	 Mute / Dimmer	 Reveal	 Setup / OPT /
 Play	 Play / Slow	 Text	 Text / Goto
 Pause	 Pause / Step / Freeze	 AV/Source	 AV / Input / RDS
 Stop	 Stop / Hold	 Menu	 Menu / Home
 Rec	 Rec / Rec Mode	 Up	 Up
 <<	 << / Tune-	 i/Info	 Info / Angle
 >>	 >> / Tune+	 Left	 Left
 I<<	 I<< / Preset-	 OK	 OK
 >>I	 >>I / Preset+	 Right	 Right
 S.Mode	 Sound / Title	 Exit	 Exit / Cancel / Clear
 Audio	 Audio / Lang I/II	 Down	 Down
 Subtitle	 Subtitle / EQ	 Back	 Back / Return
 P.Mode	 Picture / Format	 Vol+	 Vol+
 Size	 Zoom / Size	 Rec List	 Smart / List
 Sleep	 Sleep / Timer	 CH+	 CH+ / Page+
 Tv/Radio	 TV/Radio /	 Vol-	 Vol-





Original	Replacement
 ATV	 Display / Media
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Tv Guide	 Guide / EPG / -/--
 0	 0
 FAV	 Fav / Marker / PC
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Replacement
 Blue	 Blue / Prime Video / Random
 Power/Display	 Shift + Power
 Hold	 Shift + Stop /
 Aspect	 Shift + Picture / Format
 USB	 Shift + 8

