 



























 

 











 





 













 









 

 





 

 

 
 






Original	Replacement	Original	Replacement
	Power		Power
	[≡]		Text / Goto
	[≡?]		D.Menu / Top
	[...]		Subtitle / EQ
	[≡+]		Eject / Surround
	[≡o]		Sound / Title
	[≡◆]		Zoom / Size
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Recall		Fav / Marker / PC
	0		0
	Source		0
	ATV		AV / Input / RDS
	DTV		Shift + Smart / List
	EPG		Shift + Display / Media
	Radio		Guide / EPG / -/-
	I/II/I+II/▼/O		TV/Radio /
	Vol+		Audio / Lang I/II
	P+		Vol+
	P.Info		CH+ / Page+
	Mute		Display / Media
	Vol-		Mute / Dimmer
	P-		Vol-
	[i+]		CH- / Page-
	[<>]		Info / Angle
	Sleep		Picture / Format
	AV Mode		Sleep / Timer
			Shift + AV / Input / RDS





Original	Replacement	Original	Replacement
 Menu	 Menu / Home	 Option	 Setup / OPT /
 Up	 Up	 Rec	 Rec / Rec Mode
 Left	 Left	 Rec Stop	 Shift + Stop /
 OK	 OK	 Stop	 Stop / Hold
 Right	 Right		
 End	 Exit / Cancel / Clear		
 Down	 Down		
 Back	 Back / Return		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Action	 Smart / List		
 Power Aquos Link	 Shift + Power		
 <<	 << / Tune-		
 Play	 Play / Slow		
 >>	 >> / Tune+		

