 

 
 
 

 
 
 
 
 
 
 

 
 
 



 



 



 

 

 



 


 
 






 
 


 






 
 





 

 


 
 
 
 



 

 
 
 
 








Original	Replacement	Original	Replacement
 On/Standby	 Power	 Sleep	 Sleep
 Open/Close	 Eject	 Bass/Treble	 Options
 1	 1	 X-Bass	 Dual
 2	 2	 Random	 Subt
 3	 3	 <</>>/Tuning	 << >>
 4	 4	 >>/>>/Tuning	 >>
 5	 5	 Folder	 Text
 6	 6	 Demo/Dimmer	 Info
 7	 7	 Preset Up	 Up
 8	 8	 Preset Down	 Down
 9	 9	 Enter	 Ok
 0	 0	 Vol+	 Vol +
 10+	 Guide	 Vol-	 Vol -
 Back/Repeat	 Back	 Mute	 Mute
 Memory	 Smart	 CD	 Yellow
 Clear	 Exit	 USB	 Green
 Clock/Timer	 AV	 Tuner	 Blue





	Original	Replacement	Original	Replacement
	Input/Audio/Line	 Red		
	iPod	 3D		
	(Tv Out)/Display	 TV/R		
	Menu	 Menu		
	Play/Pause iPod	 Play		
	Display CD/USB	 Right		
	Stop CD/USB	 Stop		
	Play/Pause	 Pause		
	ASPM RDS	 D. Menu		
	PTY RDS	 Format		
	Display RDS	 Left		
	Network	 Media		

