 








 









 



 

 




 






 





 

 







| Original  | Replacement   |
|---|---|
|  On/Standby  |  Power                   |
|  Open/Close  |  Eject / Surround        |
|  Tuner(Band) |  Shift + 6               |
|  ASPM        |  Sound / Title           |
|  RDS-PTY     |  Subtitle / EQ           |
|  Display     |  Display / Media         |
|  Mute        |  Mute / Dimmer           |
|  X-Bass      |  Audio / Lang I/II       |
|  Bass/Treble |  Picture / Format        |
|  1           |  1                       |
|  2          |  2                      |
|  3         |  3                     |
|  Memory    |  D.Menu / Top          |
|  4         |  4                     |
|  5         |  5                     |
|  6         |  6                     |
|  Clear     |  Exit / Cancel / Clear |

| Original   | Replacement  |
|--|--|
|  7                            |  7                      |
|  8                            |  8                      |
|  9                            |  9                      |
|  Clock/Timer                  |  Shift + Sleep / Timer  |
|  0                            |  0                      |
|  10+                          |  Guide / EPG / -/--     |
|  Sleep                        |  Sleep / Timer          |
|  Play Mode                    |  Red / Netflix / Search |
|  Folder                       |  Back / Return          |
|  (Tv Out)/Display iPod/iPhone |  TV/Radio /             |
|  Menu iPod/iPhone            |  Menu / Home           |
|  Play/Pause iPod/iPhone     |  Shift + Play /       |
|  Display CD/USB             |  Smart / List         |
|  Stop CD/USB                |  Stop / Hold          |
|  Play/Pause                 |  Play / Slow          |
|  << Tuning                  |  << / Tune-           |
|  I<<                        |  I<< / Preset-        |





| Original       | Replacement           |
|----------------|-----------------------|
| Preset Up      | Shift + >>I / Preset+ |
| >>I            | >>I / Preset+         |
| Tuning >>      | >> / Tune+            |
| Vol-           | Vol-                  |
| Enter          | OK                    |
| Vol+           | Vol+                  |
| Equalizer Mode | Setup / OPT /         |
| Preset Down    | Shift + I<< / Preset- |
| Demo/Dimmer    | Shift + Mute / Dimmer |
| iPod/iPhone    | Shift + 1             |
| CD             | Shift + 3             |
| USB            | Shift + 8             |
| Input/Audio In | AV / Input / RDS      |
|                |                       |
|                |                       |
|                |                       |
|                |                       |
|                |                       |

| Original | Replacement |
|----------|-------------|
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |

