

 





 

 



 

 

 

 





 











 

 

 









Original	Replacement	Original	Replacement
 Standby	 Power	 Vol-	 Vol-
 On	 AV / Input / RDS	 Input 1	 1
 Keystone	 Audio / Lang I/II	 Input 2	 2
 Up	 Up	 Auto Sync	 Guide / EPG / -/--
 Menu/Help	 Menu / Home	 Input 3	 3
 Left	 Left	 Input 4	 4
 Enter	 OK	 Resize	 Zoom / Size
 Right	 Right		
 Return	 Back / Return		
 Down	 Down		
 Back	 Fav / Marker / PC		
 Forward	 >> / Tune+		
 Break Timer	 Sleep / Timer		
 Freeze	 Pause / Step / Freeze		
 Vol+	 Vol+		
 Picture Mode	 Picture / Format		
 AV Mute	 Mute / Dimmer		

