



Original		Replacement		Original		Replacement	
	Power		Power		TV		Shift + 1
	1		1		Up / P+		Shift + Up
	2		2		Up / P+		Up
	3		3		AV		AV / Input / RDS
	4		4		Left / V-		Left
	5		5		Left / V-		Shift + Left
	6		6		Menu		Menu / Home
	7		7		Menu		Shift + Menu /
	8		8		Right / V+		Right
	9		9		Right / V+		Shift + Right
	Mute		Mute / Dimmer		S / M / D		Exit / Cancel / Clear
	0		0		Down / P-		Shift + Down
	16:9		Picture / Format		Down / P-		Down
	Red		Red / Netflix / Search		Recall		Back / Return
	Green		Green / APP / Repeat		Recall		Shift + Back / Return
	Yellow		Yellow / YouTube / Repeat		i		Info / Angle
	Blue		Blue / Prime Video / Random		EQ		Subtitle / EQ





Original	Replacement	Original	Replacement
	≡i + Shift + Info / Angle		
	PP Sound / Title		
	≡ Text / Goto		
	≡/≡ Setup / OPT /		
	Hold Stop / Hold		
	Size Zoom / Size		
	≡X Sleep / Timer		
	≡? D.Menu / Top		

