



















 







 











 























 







| Original  |              | Replacement   |                       | Original  |             | Replacement   |                       |
|---|--------------|---|-----------------------|---|-------------|---|-----------------------|
|    | Power        |    | Power                 |    | Source      |    | AV / Input / RDS      |
|    | Mute         |    | Mute / Dimmer         |    | Home        |    | Menu / Home           |
|    | Play / Pause |    | Play / Slow           |    | Up          |    | Up                    |
|    | Play / Pause |    | Pause / Step / Freeze |    | Down        |    | Down                  |
|    | Stop         |    | Stop / Hold           |    | Right       |    | Right                 |
|    | Rec          |    | Rec / Rec Mode        |    | Left        |    | Left                  |
|    | <<           |    | << / Tune-            |    | OK          |    | OK                    |
|    | >>           |    | >> / Tune+            |    | Del         |    | Exit / Cancel / Clear |
|    | <<           |    | I<< / Preset-         |    | Blue / Info |    | Info / Angle          |
|   | >>           |   | >>I / Preset+         |   | Back        |   | Back / Return         |
|  | :Q           |  | Sound / Title         |  | Vol+        |  | Vol+                  |
|  | TV Play      |  | Eject / Surround      |  | Vol-        |  | Vol-                  |
|  | Format       |  | Picture / Format      |  | Internet    |  | Smart / List          |
|  | Live TV      |  | TV/Radio /            |  | CH+         |  | CH+ / Page+           |
|  | ≡            |  | D.Menu / Top          |  | CH-         |  | CH- / Page-           |
|  | ⚙            |  | Setup / OPT /         |  | Mouse       |  | Display / Media       |
|  | Green / TTX  |  | Text / Goto           |  | 1           |  | 1                     |





|  | Original  | Replacement   | Original | Replacement |
|--|---|---|----------|-------------|
|  |    |    |          |             |
|  |    |    |          |             |
|  |    |    |          |             |
|  |    |    |          |             |
|  |    |    |          |             |
|  |    |    |          |             |
|  |    |    |          |             |
|  |    |    |          |             |
|  |    |    |          |             |
|  |   |   |          |             |
|  |  |  |          |             |
|  |  |  |          |             |
|  |  |  |          |             |
|  |  |  |          |             |
|  |  |  |          |             |
|  |  |  |          |             |

