

 

 


 
 
 

 


 

 

 
 
 
 
 



 
 
 

 
 
 

 
 

 

 

 

 
 


 
 
 
 
 
 
 



 

 












Original	Replacement	Original	Replacement
 Power	 Power	 7	 7
 Theatre	 Smart	 8	 8
 One-Touch Play	 Shift + Play	 9	 9
 Eject	 Eject	 0	 0
 Sleep	 Sleep	 Clear	 Exit
 Display	 Shift + Info	 Enter	 Pre Ch
 Function	 Options	 Picture Navi	 List
 Tone	 3D	 Audio	 Dual
 Night	 Shift + Sleep	 Subtitle	 Subt
 Dimmer	 Shift + Mute	 D.Tuning	 Media
 Repeat	 Text	 Angle	 Format
 1	 1	 DVD Top Menu	 Shift + Menu
 2	 2	 DVD Menu	 D. Menu
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 OK	 Ok
 6	 6	 Right	 Right







