




 
 


 



 
 
 

 

 



 





 
 










 







 
 

 
 
 






Original	Replacement	Original	Replacement
 Power	 Power	 Input Mode	 AV / Input / RDS
 Theatre	 Smart / List	 Sleep	 Sleep / Timer
 1	 1	 Night Mode	 Picture / Format
 2	 2	 Display	 Display / Media
 3	 3	 AMP Menu	 D.Menu / Top
 4	 4	 2CH/A.Direct	 Zoom / Size
 5	 5	 Options/Tools	 Setup / OPT /
 6	 6	 Return/Exit	 Back / Return
 7	 7	 Up	 Up
 8	 8	 Home/Menu	 Menu / Home
 9	 9	 OK	 OK
 0/10	 0	 Down	 Down
 ENT/MEM	 Fav / Marker / PC	 Right	 Right
 A.F.D.	 Audio / Lang I/II	 Left	 Left
 Movie	 Subtitle / EQ	 I<< / Preset-	 I<< / Preset-
 Music	 TV/Radio /	 Red / Netflix / Search	 Red / Netflix / Search
 Auto Cal	 Text / Goto	 Green / APP / Repeat	 Green / APP / Repeat




 
 
 


 



 

 




 








 
 





 

 

 
 
 

 



 

 


 








Original	Replacement
 >>	 >> / Preset+
 <</Tuning-	 << / Tune-
 Play	 Play / Slow
 >>/Tuning+	 >> / Tune+
 Pause	 Pause / Step / Freeze
 Stop/D.Tuning	 Stop / Hold
 Master Vol+	 Vol+
 Master Vol-	 Vol-
 Muting	 Mute / Dimmer
 Preset+	 Shift + >> / Preset+
 Preset-	 Shift + << / Preset-
 Video 1	 Shift + 4
 Video 2	 Shift + 5
 BD	 Shift + 3
 SAT	 Shift + 0
 DVD	 Shift + 2
 SA-CD/CD	 Shift + 8

Original	Replacement
 TV	 Shift + 1
 DMPort	 Shift + 9
 Tuner	 Shift + 6
 Tuning- Tuner	 Shift + << /
 Tuning+ Tuner	 Shift + >> /
 Stop Tuner	 Shift + Stop /





Original	Replacement
 Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0
 -/--	 Guide / EPG / -/--
 ENT/MEM	 Fav / Marker / PC
 Display	 Display / Media
 Up	 Up
 Down	 Down
 Right	 Right

Original	Replacement
 Left	 Left
 OK	 OK
 Home/Menu	 Menu / Home
 Return/Exit	 Back / Return
 Options/Tools	 Setup / OPT /
 I<<	 I<< / Preset-
 ←	 Red / Netflix / Search
 →	 Green / APP / Repeat
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Tv Vol+	 Vol+
 Tv Vol-	 Vol-
 Muting	 Mute / Dimmer





Original	Replacement	Original	Replacement
	Tv CH+		CH+ / Page+
	Tv CH-		CH- / Page-
	Tv Input		AV / Input / RDS
	Wide		Picture / Format

Original	Replacement

