






 



 






Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Red/M	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Up	 Up
 Down	 Down

Original	Replacement
 Right	 Right
 Left	 Left
 OK	 Ok
 PR+	 Ch +
 PR-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 TV	 TV/R
 Video	 AV
 L/?	 Guide
 PC	 Dual
 Text	 Pre Ch
 F[+]	 Text
 F[+]	 3D
 Hold/Freeze	 Format
 M/S	 Options





Original		Replacement		Original		Replacement	
	Mute		Mute				
	PIP		Media				
	Auto/Page		Smart				
	i		Info				
	Timer/Mix		Subt				
	F1	+	Shift + 1				
	F2	+	Shift + 2				
	F3	+	Shift + 3				
	F4	+	Shift + 4				

