







 



































| Original  | Replacement  |
|---|--|
|    |  Power              |
|    |  Mute / Dimmer      |
|    |  1                  |
|    |  2                  |
|    |  3                  |
|    |  Eject / Surround   |
|    |  4                  |
|    |  5                  |
|    |  6                  |
|    |  Shift + Text /    |
|   |  7                 |
|  |  8                |
|  |  9                |
|  |  0                |
|  |  Menu / Home      |
|  |  AV / Input / RDS |
|  |  Up               |

| Original  | Replacement  |
|---|--|
|    |  Left                       |
|    |  OK                         |
|    |  Right                      |
|    |  Down                       |
|    |  D.Menu / Top               |
|    |  Exit / Cancel / Clear      |
|    |  Vol+                       |
|    |  Sound / Title              |
|    |  CH- / Page-                |
|    |  Vol-                       |
|   |  Picture / Format          |
|  |  CH+ / Page+              |
|  |  Sleep / Timer            |
|  |  Shift + Picture / Format |
|  |  Setup / OPT /            |
|  |  Shift + Back / Return    |
|  |  Text / Goto              |





|   | Original    | Replacement   |  |
|---|-------------|---|--|
|    | EPG         |  Guide / EPG / -/--          |  |
|    | Play        |  Play / Slow                 |  |
|    | Pause       |  Pause / Step / Freeze       |  |
|    | Stop        |  Stop / Hold                 |  |
|    | FAV         |  Fav / Marker / PC           |  |
|    | Info        |  Info / Angle                |  |
|    | Red/DVD/USB |  Red / Netflix / Search      |  |
|    | Green/Title |  Green / APP / Repeat        |  |
|    | Yellow/PBC  |  Yellow / YouTube / Repeat   |  |
|    | Blue/Angle  |  Blue / Prime Video / Random |  |
|   | <<          |  << / Tune-                 |  |
|  | >>          |  >> / Tune+                |  |
|  | l<<         |  l<< / Preset-             |  |
|  | >>l         |  >>l / Preset+             |  |
|  | Return      |  Back / Return             |  |
|  | Display     |  Display / Media           |  |
|  | DVD Audio   |  Audio / Lang I/II         |  |

|   | Original | Replacement   |  |
|---|----------|---|--|
|  | Subtitle |  Subtitle / EQ                 |  |
|  | Reveal   |  Shift + Exit / Cancel / Clear |  |
|  | Hold     |  Shift + Stop /                |  |
|  | List     |  Smart / List                  |  |
|  | Index    |  TV/Radio /                    |  |
|  | Subpage  |  Shift + Smart / List          |  |
|  | Size     |  Zoom / Size                   |  |
|  | Mix      |  Shift + Display / Media       |  |
|  | Freeze   |  Shift + Pause / Step /        |  |
|   |          |   |  |
|   |          |   |  |
|   |          |   |  |
|   |          |   |  |
|   |          |   |  |
|   |          |   |  |
|   |          |   |  |
|   |          |   |  |
|   |          |   |  |
|   |          |   |  |

