










 













 
 
 
 




 
 


 





 







 








Original	Replacement	Original	Replacement
 Power	 Power	 S-Mode	 Sound / Title
 Source	 AV / Input / RDS	 Nicam / Audio	 Audio / Lang I/II
 Sleep	 Sleep / Timer	 Up	 Up
 Mute	 Mute / Dimmer	 Left	 Left
 1	 1	 Enter	 OK
 2	 2	 Right	 Right
 3	 3	 Down	 Down
 4	 4	 Red / Program	 Red / Netflix / Search
 5	 5	 Red / Program	 TV/Radio /
 6	 6	 Green / Goto	 Green / APP / Repeat
 7	 7	 Yellow / Angle	 Yellow / YouTube / Repeat
 8	 8	 Blue / USB/Card	 Blue / Prime Video / Random
 9	 9	 Subtitle	 Subtitle / EQ
 0	 0	 Info	 Info / Angle
 -/-- / +10	 Guide / EPG / -/--	 Menu / Exit	 Menu / Home
 Recall	 Back / Return	 Menu / Exit	 Exit / Cancel / Clear
 P-Mode	 Picture / Format	 + / FAV+	 Vol+

Original	Replacement	Original	Replacement
 S-Mode	 Sound / Title	 Nicam / Audio	 Audio / Lang I/II
 Up	 Up	 Left	 Left
 Enter	 OK	 Right	 Right
 Down	 Down	 Red / Program	 Red / Netflix / Search
 Red / Program	 TV/Radio /	 Green / Goto	 Green / APP / Repeat
 Yellow / Angle	 Yellow / YouTube / Repeat	 Blue / USB/Card	 Blue / Prime Video / Random
 Subtitle	 Subtitle / EQ	 Info	 Info / Angle
 Menu / Exit	 Menu / Home	 Menu / Exit	 Exit / Cancel / Clear
 Menu / Exit	 Exit / Cancel / Clear	 + / FAV+	 Vol+





Original		Replacement		Original		Replacement	
	Canales / Repeat		Display / Media		I<< / TV/Radio		I<< / Preset-
	EPG /		Shift + Guide / EPG / -/-		Down / P.Down		Shift + Down
	EPG /		D.Menu / Top		>>I / Subpage		>>I / Preset+
	- / FAV-		Vol-				
	FAV / AB		Fav / Marker / PC				
	Teletext / Eject		Eject / Surround				
	Teletext / Eject		Text / Goto				
	Play/Pause / Mix		Play / Slow				
	Play/Pause / Mix		Pause / Step / Freeze				
	Stop / Hold		Stop / Hold				
	DVD-Setup		Setup / OPT /				
	<< / Index		<< / Tune-				
	Up / P.Up		Shift + Up				
	>> / Size		>> / Tune+				
	Left / Cancel		Shift + Left				
	OK / Reveal		Shift + OK				
	Right / Clock		Shift + Right				

