



Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 EPG	 Guide
 1	 1	 Exit	 Exit
 2	 2	 Up / CH + / I<<	 Up
 3	 3	 Down / CH - / >>I	 Down
 4	 4	 Right / Vol +	 Right
 5	 5	 Left / Vol -	 Left
 6	 6	 OK	 Ok
 7	 7	 Up / CH + / I<<	 I<<
 8	 8	 Down / CH - / >>I	 >>I
 9	 9	 Up / CH + / I<<	 Ch +
 0	 0	 Down / CH - / >>I	 Ch -
 FAV	 Shift + Pre Ch	 Left / Vol -	 Vol -
 Recall	 Pre Ch	 Right / Vol +	 Vol +
 Game	 Media	 Red / Zoom	 Red
 Auto	 Smart	 Green / Lan/Audio	 Green
 Info	 Info	 Yellow /	 Yellow

Original	Replacement	Original	Replacement
 Power	 Power	 TV	 AUX
 MUTE	 MUTE	 DVD	 REC MODE
 1	 1	 SAT	 PLAY MODE
 2	 2	 AUX	 II
 3	 3	 GUIDE	 ■
 4	 4	 EXIT	 ●
 5	 5	 CLEAR EXIT	 ⏮
 6	 6	 ▲	 ⏭
 7	 7	 ▼	 DISC NAV
 8	 8	 ▶	 SOUND
 9	 9	 ◀	 AD
 0	 0	 OK	 SETTINGS
 FAV	 Shift + Pre Ch	 LIST	 OPT
 Recall	 Pre Ch	 DUAL	 ECO
 Game	 Media	 SUBT	 3D
 Auto	 Smart	 FORMAT	 TIMER
 Info	 Info	 TV/R	 AV
		 E-MANUAL	
		 REPEAT	
		 ZOOM	
		 TEXT	
		 ▲	
		 ▼	
		 ◀	
		 ▶	
		 OK	
		 EXIT	
		 I<<	
		 >>I	
		 Ch +	
		 Ch -	
		 VOL -	
		 VOL +	
		 A	
		 B	
		 C	
		 D	



