














 



 

 

 



 







 



 



 



 

 





 



 







 




Original	Replacement	Original	Replacement
 Power MD	 Power	 Right	 Right
 TV	 TV/R	 Left	 Left
 CD	 Yellow	 Enter	 Ok
 DVD	 Blue	 Menu	 D. Menu
 Tuner/Band	 Green	 Display	 Info
 Tape	 Red	 Top Menu/Disc/Deck	 Menu
 VCR	 Smart	 1 MD	 1
 MD	 Media	 2 MD	 2
 Vol+	 Vol +	 3 MD	 3
 Vol-	 Vol -	 4 MD	 4
 Muting	 Mute	 5 MD	 5
 Stop MD	 Stop	 6 MD	 6
 Play MD	 Play	 7 MD	 7
 <</>> MD	 <<	 8 MD	 8
 >>/>> MD	 >>	 9 MD	 9
 Up	 Up	 0 MD	 0
 Down	 Down	 >10/-/- MD	 Guide








 



 

 


 




 




 







 



 

 

 







Original	Replacement
Tv/AV	AV
Stereo	Dual
Surround	Options
SFC	Subt
Test	Back
Delay	Format
Level	3D
+	Ch +
-	Ch -
Power TV	Shift + Power
Tv Vol Up	Shift + Vol +
Tv Vol Down	Shift + Vol -
1 Tv	Shift + 1
2 Tv	Shift + 2
3 Tv	Shift + 3
4 Tv	Shift + 4
5 Tv	Shift + 5

Original	Replacement
6 Tv	Shift + 6
7 Tv	Shift + 7
8 Tv	Shift + 8
9 Tv	Shift + 9
0 Tv	Shift + 0
>10/-/- Tv	Shift + Guide


 
 




Original	Replacement	Original	Replacement
 Power DVD	 Power	 Right	 Right
 TV	 TV/R	 Left	 Left
 VCR	 Smart	 Enter	 Ok
 Tuner/Band	 Green	 Stereo	 Dual
 Tape	 Red	 Surround	 Options
 MD	 Media	 SFC	 Subt
 CD	 Yellow	 Test	 Back
 DVD	 Blue	 Delay	 Format
 Play DVD	 Play	 Level	 3D
 I<</<< DVD	 <<	 +	 Ch +
 Stop DVD	 Stop	 -	 Ch -
 >>/>>I DVD	 >>	 1 DVD	 1
 Top Menu/Disc/Deck	 Menu	 2 DVD	 2
 Display	 Info	 3 DVD	 3
 Menu	 D. Menu	 4 DVD	 4
 Up	 Up	 5 DVD	 5
 Down	 Down	 6 DVD	 6





Original		Replacement		Original		Replacement	
	7 DVD		7				
	8 DVD		8				
	9 DVD		9				
	0 DVD		0				
	>10/-/- DVD		Guide				
	Vol+		Vol +				
	Vol-		Vol -				
	Muting		Mute				





Original	Replacement
 Power CD	 Power
 TV	 TV/R
 VCR	 Smart
 CD	 Yellow
 DVD	 Blue
 Tape	 Red
 MD	 Media
 Tuner/Band	 Green
 Stop CD	 Stop
 I<</<< CD	 <<
 >>/>>I CD	 >>
 Play CD	 Play
 Menu	 D. Menu
 Display	 Info
 Top Menu/Disc/Deck	 Menu
 Up	 Up
 Down	 Down

Original	Replacement
 Right	 Right
 Left	 Left
 Enter	 Ok
 Stereo	 Dual
 Surround	 Options
 SFC	 Subt
 Test	 Back
 Delay	 Format
 Level	 3D
 +	 Ch +
 -	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Muting	 Mute
 Power Tape	 Shift + Power
 Stop Tape	 Shift + Stop
 Play Tape	 Shift + Play




 



 

 

 



 



 

 





















 

 



 



 


 
 



 

 



 




Original	Replacement	Original	Replacement
<</><< Tape	SHIFT + << Shift + <<		
>>/>>  Tape	SHIFT + >> Shift + >>		
Top Menu/Disc/Deck	SHIFT + TOP MENU / MENU Shift + Menu		
1 CD-Tape	1		
2 CD-Tape	2		
3 CD-Tape	3		
4 CD-Tape	4		
5 CD-Tape	5		
6 CD-Tape	6		
7 CD-Tape	7		
8 CD-Tape	8		
9 CD-Tape	9		
0 CD-Tape	0		
>10/-/- CD-Tape	>10/-/- Guide		
Direct Tuning/Disc Enter	REPEAT TEXT Text		





Original	Replacement	Original	Replacement
 Power VCR	 Power	 6 VCR	 6
 VCR	 Smart	 7 VCR	 7
 Tape	 Red	 8 VCR	 8
 TV	 TV/R	 9 VCR	 9
 CD	 Yellow	 0 VCR	 0
 DVD	 Blue	 >10/-/- VCR	 Guide
 Tuner/Band	 Green	 Direct Tuning/Disc Enter	 Text
 MD	 Media	 Vol+	 Vol +
 Stop	 Stop	 Vol-	 Vol -
 I<</<<	 <<	 Muting	 Mute
 >>/>>I	 >>	 Up	 Up
 Play	 Play	 Down	 Down
 1 VCR	 1	 Right	 Right
 2 VCR	 2	 Left	 Left
 3 VCR	 3	 Enter	 Ok
 4 VCR	 4	 Top Menu/Disc/Deck	 Menu
 5 VCR	 5	 Display	 Info





Original	Replacement	Original	Replacement
Menu	D. Menu	8 Tuner/Band	Shift + 8
Stereo	Dual	9 Tuner/Band	Shift + 9
Surround	Options	0 Tuner/Band	Shift + 0
SFC	Subt	>10/-/-	Shift + Guide
Test	Back		
Delay	Format		
Level	3D		
+	Ch +		
-	Ch -		
Power Tuner/Band	Shift + Power		
1 Tuner/Band	Shift + 1		
2 Tuner/Band	Shift + 2		
3 Tuner/Band	Shift + 3		
4 Tuner/Band	Shift + 4		
5 Tuner/Band	Shift + 5		
6 Tuner/Band	Shift + 6		
7 Tuner/Band	Shift + 7		

Original	Replacement
8 Tuner/Band	Shift + 8
9 Tuner/Band	Shift + 9
0 Tuner/Band	Shift + 0
>10/-/-	Shift + Guide

