































































 







Original		Replacement		Original		Replacement	
	Power		Power		Up		Up
	Mute		Mute / Dimmer		PR+		CH+ / Page+
	1		1		PR-		CH- / Page-
	2		2		Down		Down
	3		3		Right		Right
	4		4		Vol+		Vol+
	5		5		Left		Left
	6		6		Vol-		Vol-
	7		7		TV/TX		Text / Goto
	8		8		PP		Fav / Marker / PC
	9		9		16:9		Setup / OPT /
	0		0		Red		Red / Netflix / Search
	Guide / EPG / -/--		Guide / EPG / -/--		Green		Green / APP / Repeat
	AV		AV / Input / RDS		Yellow		Yellow / YouTube / Repeat
	Menu		Menu / Home		Blue		Blue / Prime Video / Random
	Swap		Back / Return		Violet		Display / Media
	OK		OK		[] Smart Controls		Picture / Format





Original	Replacement	Original	Replacement
CONTROLS [Smart Controls]	TITLE SOUND		
MIX/))>((LANG I/II AUDIO		
P100/PAT	TIMER SLEEP		
SUB	EQ SUBTITLE		
Update	SIZE ZOOM		
Hold	HOLD		
Freeze/DOUB	SURROUND		
REV/Scan	PROGRAM TV/RADIO		

Original	Replacement

