







































































 




 




| Original | Replacement | Original | Replacement |
|---|-------------|---|-----------------------------|
|  | Power |  | Power |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | TV/SAT |  | AV / Input / RDS |
|  | TV/Radio |  | TV/Radio / |
|  | Zoom |  | Zoom / Size |
|  | List |  | Smart / List |
|  | Audio |  | Audio / Lang I/II |
|  | EPG |  | Guide / EPG / -/-- |
|  | Timer |  | Sleep / Timer |
|  | Text |  | Text / Goto |
|  | Exit |  | Exit / Cancel / Clear |
|  | Menu |  | Menu / Home |
|  | M/P |  | Display / Media |
|  | Mute |  | Mute / Dimmer |

| Original | Replacement | Original | Replacement |
|---|-------------|---|-------------------|
|  | CH+ |  | CH+ / Page+ |
|  | CH- |  | CH- / Page- |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Vol+ |  | Vol+ |
|  | Vol- |  | Vol- |
|  | Recall |  | Back / Return |
|  | P+ |  | >> / Preset+ |
|  | P- |  | << / Preset- |
|  | FAV |  | Fav / Marker / PC |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |





| Original | Replacement | Original | Replacement |
|---|-------------|---|-----------------------|
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Info |  | Info / Angle |
|  | Pause |  | Pause / Step / Freeze |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |










 

























 


| Original | Replacement |
|----------|-------------------|
| Power | Power |
| SAT | Smart / List |
| Info | Info / Angle |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 / Zoom | Zoom / Size |
| 0 / Zoom | 0 |
| Audio | Audio / Lang I/II |
| Mute | Mute / Dimmer |
| Recall | Back / Return |

| Original | Replacement |
|--------------|-----------------------------|
| FAV | Fav / Marker / PC |
| Up / CH+ | CH+ / Page+ |
| Down / CH- | Down |
| Up / CH+ | Up |
| Right / Vol+ | Right |
| Right / Vol+ | Vol+ |
| Down / CH- | CH- / Page- |
| Left / Vol- | Vol- |
| Left / Vol- | Left |
| OK | OK |
| Menu | Menu / Home |
| Exit | Exit / Cancel / Clear |
| Blue / Pause | Blue / Prime Video / Random |
| Blue / Pause | Pause / Step / Freeze |
| Red / Text | Red / Netflix / Search |
| Red / Text | Text / Goto |
| Multivideo | Display / Media |





| Original | Replacement | Original | Replacement |
|------------|---|--------------|--|
| Mute |  Mute / Dimmer | Menu Down |  Down |
| PWR On/Off |  Power | Back |  Back / Return |
| App |  Shift + App / Green / APP / | Volume+ |  Vol+ |
| Epg |  Guide / EPG / -/-- | CH/Page+ |  CH+ / Page+ |
| Info |  Info / Angle | Volume- |  Vol- |
| Subt.List |  Subtitle / EQ | CH/Page- |  CH- / Page- |
| TV |  TV/Radio / | Audio |  Audio / Lang I/II |
| Text |  Text / Goto | 1. ? |  1 |
| Zoom |  Zoom / Size | 2abc |  2 |
| Menu |  Menu / Home | 3def |  3 |
| TV/SAT |  AV / Input / RDS | 4ghi |  4 |
| Menu Up |  Up | 5jkl |  5 |
| Display |  Display / Media | 6mno |  6 |
| Menu Left |  Left | 7pqrm |  7 |
| OK Enter |  OK | 8tuv |  8 |
| Menu Right |  Right | 9wxyz |  9 |
| Exit |  Exit / Cancel / Clear | Guide Pilote |  Shift + Guide / EPG / -/-- |

| Original | Replacement | Original | Replacement |
|------------|---|--------------|--|
| Mute |  Mute / Dimmer | Menu Down |  Down |
| PWR On/Off |  Power | Back |  Back / Return |
| App |  Shift + App / Green / APP / | Volume+ |  Vol+ |
| Epg |  Guide / EPG / -/-- | CH/Page+ |  CH+ / Page+ |
| Info |  Info / Angle | Volume- |  Vol- |
| Subt.List |  Subtitle / EQ | CH/Page- |  CH- / Page- |
| TV |  TV/Radio / | Audio |  Audio / Lang I/II |
| Text |  Text / Goto | 1. ? |  1 |
| Zoom |  Zoom / Size | 2abc |  2 |
| Menu |  Menu / Home | 3def |  3 |
| TV/SAT |  AV / Input / RDS | 4ghi |  4 |
| Menu Up |  Up | 5jkl |  5 |
| Display |  Display / Media | 6mno |  6 |
| Menu Left |  Left | 7pqrm |  7 |
| OK Enter |  OK | 8tuv |  8 |
| Menu Right |  Right | 9wxyz |  9 |
| Exit |  Exit / Cancel / Clear | Guide Pilote |  Shift + Guide / EPG / -/-- |





| Original | Replacement | Replacement |
|----------|---|-----------------------|
| Power |  | Power |
| Mute |  | Mute / Dimmer |
| Pause |  | Pause / Step / Freeze |
| Audio |  | Audio / Lang I/II |
| Zoom |  | Zoom / Size |
| Timer |  | Sleep / Timer |
| Tv/Radio |  | TV/Radio / |
| Text |  | Text / Goto |
| Tv/SAT |  | AV / Input / RDS |
| Menu |  | Menu / Home |
| Up/CH+ |  | Up |
| Info |  | Info / Angle |
| Left |  | Left |
| OK |  | OK |
| Right |  | Right |
| Exit |  | Exit / Cancel / Clear |
| Down/CH- |  | Down |

| Original | Replacement | Replacement |
|----------|---|-------------------|
| Recall |  | Back / Return |
| Vol+ |  | Vol+ |
| List |  | Smart / List |
| P+ |  | CH+ / Page+ |
| Vol- |  | Vol- |
| M/P |  | Display / Media |
| P- |  | CH- / Page- |
| 1 |  | 1 |
| 2 |  | 2 |
| 3 |  | 3 |
| 4 |  | 4 |
| 5 |  | 5 |
| 6 |  | 6 |
| 7 |  | 7 |
| 8 |  | 8 |
| 9 |  | 9 |
| EPG |  | Guide / EPG / -/- |



