



Original		Replacement		Original		Replacement	
	Power		Power		Mute		Mute / Dimmer
	TV/R		TV/Radio /		CH+		CH+ / Page+
	Quick Menu		D.Menu / Top		CH-		CH- / Page-
	1		1		Menu		Menu / Home
	2		2		Exit		Exit / Cancel / Clear
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		OK		OK
	8		8		Red		Red / Netflix / Search
	9		9		Green		Green / APP / Repeat
	0		0		Yellow		Yellow / YouTube / Repeat
	i		Info / Angle		Blue		Blue / Prime Video / Random
	Guide		Guide / EPG / -/--		TXT		Text / Goto
	Vol+		Vol+		Stop		Stop / Hold
	Vol-		Vol-		Play		Play / Slow





	Original	Replacement	Original	Replacement
	Pause	 Pause / Step / Freeze		
	Rec	 Rec / Rec Mode		
	l<<	 l<< / Preset-		
	<<	 << / Tune-		
	>>	 >> / Tune+		
	>>l	 >>l / Preset+		

