 

 
 
 

 
 
 
 


 





 



 

 









 




| Original | Replacement |
|--|--|
|  Power |  Power |
|  3D |  Shift + 3 |
|  TV |  Shift + 1 |
|  TV |  TV/Radio / |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Eco |  Display / Media |
|  0 |  0 |
|  Source |  AV / Input / RDS |
|  Vol+ |  Vol+ |

| Original | Replacement |
|--|---|
|  Mute |  Mute / Dimmer |
|  P+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  P- |  CH- / Page- |
|  Info |  Info / Angle |
|  Option |  Setup / OPT / |
|  Smart Tv |  Smart / List |
|  Guide |  Guide / EPG / -/- |
|  Menu |  Menu / Home |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Back |  Back / Return |
|  Down |  Down |
|  Exit |  Exit / Cancel / Clear |
|  Zoom- |  Shift + Down |





| Original | Replacement |
|----------|-----------------------------|
| Zoom+ | Shift + Up |
| @/Home | D.Menu / Top |
| Sleep | Sleep / Timer |
| Pre-CH | Shift + Back / Return |
| FAV | Fav / Marker / PC |
| List | Shift + Smart / List |
| Red | Red / Netflix / Search |
| Green | Green / APP / Repeat |
| Yellow | Yellow / YouTube / Repeat |
| Blue | Blue / Prime Video / Random |
| OO/Lang | Audio / Lang I/II |
| Subtitle | Subtitle / EQ |
| Text | Text / Goto |
| I< | I<< / Preset- |
| Stop | Stop / Hold |
| Play | Play / Slow |
| Pause | Pause / Step / Freeze |

| Original | Replacement |
|----------|----------------|
| > | >> / Preset+ |
| << | << / Tune- |
| Rec | Rec / Rec Mode |
| >> | >> / Tune+ |

