



 

 

 



 
 


 



 
 





 

 

 
 



 








 
 

 



 




 


 











Original		Replacement		Original		Replacement	
	Power		Power		Info		Info
	Mute		Mute		EPG		Guide
	1		1		Up		Up
	2		2		Right		Right
	3		3		Down		Down
	4		4		Left		Left
	5		5		OK		Ok
	6		6		Menu		Menu
	7		7		Exit		Exit
	8		8		Vol +		Vol +
	9		9		Vol -		Vol -
	0		0		P +		Shift + Ch +
	TV / R		TV/R		List		List
	Home		Smart		P -		Shift + Ch -
	FAV		Pre Ch		CH +		Ch +
	Back		Back		CH -		Ch -
	Audio		Dual		Opt		Options





Original	Replacement	Original	Replacement
 Text	 Text		
 SUB	 Subt		
 Msg	 AV		
 Pause	 Pause		
 <<<	 <<<		
 >>>	 >>>		
 Rec	 Rec		
 Play	 Play		
 I<<<	 I<<<		
 >>>I	 >>>I		
 Stop	 Stop		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

