















































 


 





Original	Replacement	Original	Replacement
	Power		Power
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	TV/SAT		AV / Input / RDS
	TV/Radio		TV/Radio /
	Zoom		Zoom / Size
	List		Smart / List
	Audio		Audio / Lang I/II
	EPG		Guide / EPG / -/--
	Timer		Sleep / Timer
	Text		Text / Goto
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	M/P		Display / Media
	Mute		Mute / Dimmer

Original	Replacement	Original	Replacement
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Vol+		Vol+
	Vol-		Vol-
	Recall		Back / Return
	P+		>>I / Preset+
	P-		I<< / Preset-
	FAV		Fav / Marker / PC
	1		1
	2		2
	3		3
	4		4

 


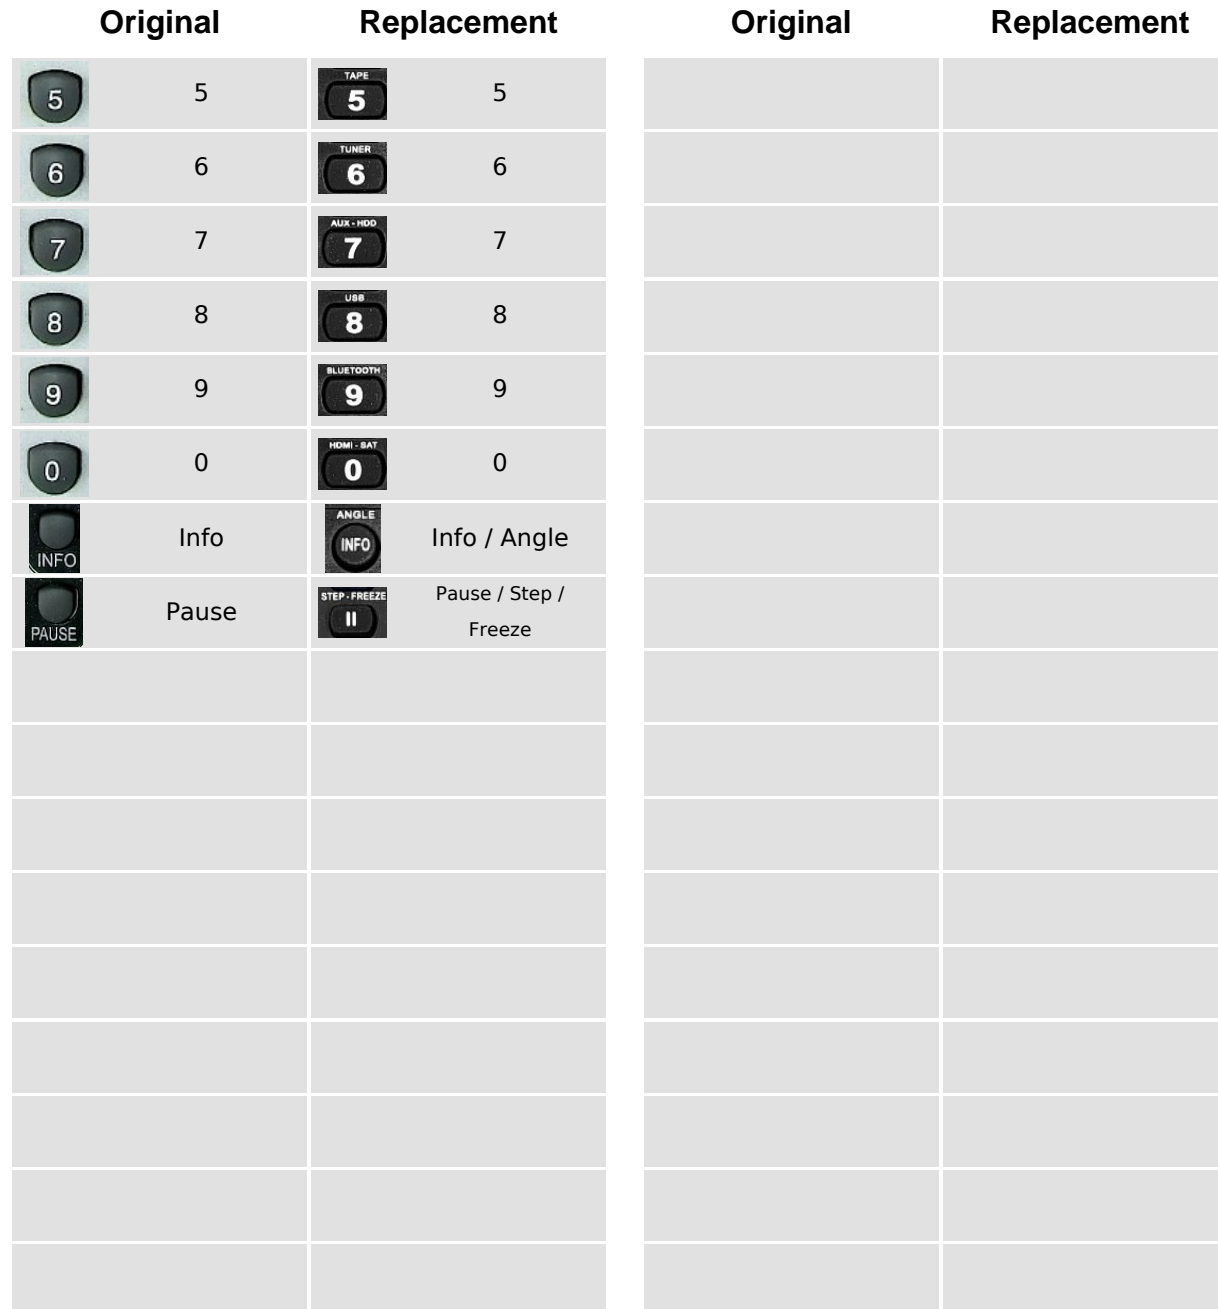








Original	Replacement
 Power	 Power
 SAT	 Smart / List
 Info	 Info / Angle
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / Zoom	 Zoom / Size
 0 / Zoom	 0
 Audio	 Audio / Lang I/II
 Mute	 Mute / Dimmer
 Recall	 Back / Return



 















Original	Replacement
 FAV	 Fav / Marker / PC
 Up / CH+	 CH+ / Page+
 Down / CH-	 Down
 Up / CH+	 Up
 Right / Vol+	 Right
 Right / Vol+	 Vol+
 Down / CH-	 CH- / Page-
 Left / Vol-	 Vol-
 Left / Vol-	 Left
 OK	 OK
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Blue / Pause	 Blue / Prime Video / Random
 Blue / Pause	 Pause / Step / Freeze
 Red / Text	 Red / Netflix / Search
 Red / Text	 Text / Goto
 Multivideo	 Display / Media






















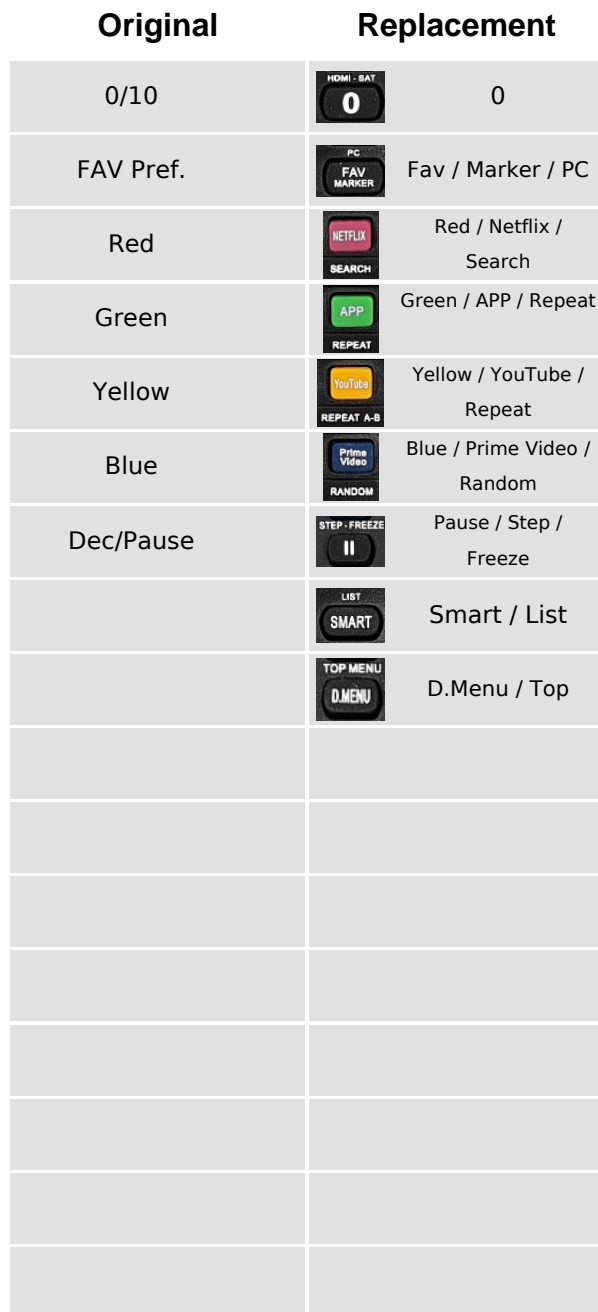




Original	Replacement	
Mute		Mute / Dimmer
PWR On/Off		Power
App	 + 	Shift + Green / APP /
Epg		Guide / EPG / -/--
Info		Info / Angle
Subt.List		Subtitle / EQ
TV		TV/Radio /
Text		Text / Goto
Zoom		Zoom / Size
Menu		Menu / Home
TV/SAT		AV / Input / RDS
Menu Up		Up
Display		Display / Media
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear

Original	Replacement	
Menu Down		Down
Back		Back / Return
Volume+		Vol+
CH/Page+		CH+ / Page+
Volume-		Vol-
CH/Page-		CH- / Page-
Audio		Audio / Lang I/II
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote	 + 	Shift + Guide / EPG / -/--


























Original	Replacement	
Power		Power
Mute		Mute / Dimmer
Pause		Pause / Step / Freeze
Audio		Audio / Lang I/II
Zoom		Zoom / Size
Timer		Sleep / Timer
Tv/Radio		TV/Radio /
Text		Text / Goto
Tv/SAT		AV / Input / RDS
Menu		Menu / Home
Up/CH+		Up
Info		Info / Angle
Left		Left
OK		OK
Right		Right
Exit		Exit / Cancel / Clear
Down/CH-		Down

Original	Replacement	
Recall		Back / Return
Vol+		Vol+
List		Smart / List
P+		CH+ / Page+
Vol-		Vol-
M/P		Display / Media
P-		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
EPG		Guide / EPG / -/-



