 

 



 

 





 

 

 







 



 



 



 



 











 



 
 


 



 









 



 

 



 







 

 
 
 
 












Original	Replacement	Original	Replacement
 Open/Close	 Eject / Surround	 Prog-	 CH- / Page-
 Input Select	 AV / Input / RDS	 Clear	 Exit / Cancel / Clear
 HDMI	 Shift + 0	 [i+]/Info	 Info / Angle
 Power	 Power	 Text	 Text / Goto
 1	 1	 Variable Replay	 Picture / Format
 2	 2	 Variable Skip	 Zoom / Size
 3	 3	 Guide	 Guide / EPG / -/-
 4	 4	 Top Menu	 Shift + D.Menu / Top Menu
 5	 5	 Disc Menu	 D.Menu / Top
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 Enter/OK	 OK
 9	 9	 Right	 Right
 0	 0	 Display	 Display / Media
 Timer Prog	 Sleep / Timer	 Down	 Down
 Setup	 Setup / OPT /	 Return	 Back / Return
 Prog+	 CH+ / Page+	 Red	 Red / Netflix / Search





Original	Replacement
 Green	 Green / APP / Repeat
 Yellow/Mode	 Yellow / YouTube / Repeat
 Blue/Search	 Blue / Prime Video / Random
 <</REV	 << / Tune-
 Play	 Play / Slow
 >>/FWD	 >> / Tune+
 I<< Skip	 I<< / Preset-
 Stop	 Stop / Hold
 >>I Skip	 >>I / Preset+
 Pause	 Pause / Step / Freeze
 VCR	 Shift + 4
 HDD	 Shift + 7
 DVD	 Shift + 2
 Time Slip	 TV/Radio /
 Dubbing	 Sound / Title
 Rec Mode	 Shift + Rec / Rec Mode
 Rec	 Rec / Rec Mode

Original	Replacement
 Subtitle	 Subtitle / EQ
 O)))/Audio	 Audio / Lang I/II
 SAT Link	 Smart / List

