



Original		Replacement		Original		Replacement	
	Power		Power		9		9
	Top Menu	+	Shift + D.Menu / Top Menu		AD		Audio / Lang I/II
	DVD Menu		D.Menu / Top		0		0
	Tv/DVD		TV/Radio /		ATV/DTV	+	Shift + AV / Input / RDS
	Open/Close		Eject / Surround		Guide		Guide / EPG / -/-
	[V]	+	Shift + Down		Input		AV / Input / RDS
	O/I/II		Display / Media		Menu		Menu / Home
	Subtitle		Subtitle / EQ		Quick	+	Shift + Exit / Cancel / Clear
	Text/Angle		Text / Goto		Up		Up
	1		1		Left		Left
	2		2		OK		OK
	3		3		Right		Right
	4		4		Down		Down
	5		5		Exit		Exit / Cancel / Clear
	6		6		Jump		Smart / List
	7		7		Return		Back / Return
	8		8		Setup		Setup / OPT /





Original	Replacement
P+	CH+ / Page+
[≡i]/[≡+]	Info / Angle
Vol+	Vol+
P-	CH- / Page-
Mute	Mute / Dimmer
Vol-	Vol-
Pause	Pause / Step / Freeze
I<</[≡?]	I<< / Preset-
>>I[O]/[≡x]	>>I / Preset+
<</[≡+]	<< / Tune-
Play	Play / Slow
Stop	Stop / Hold
>>/[≡◇]	>> / Tune+
Red/Zoom	Red / Netflix / Search
Green/Repeat	Green / APP / Repeat
Yellow/Root	Yellow / YouTube / Repeat
Blue/Title	Blue / Prime Video / Random

Original	Replacement

