



Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol-
 1	 1	 P+	 CH+ / Page+
 2	 2	 P-	 CH- / Page-
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 [G]	 Guide / EPG / -/--
 9	 9	 i	 Info / Angle
 0	 0	 ←	 Back / Return
 Lang	 Audio / Lang I/II	 Exit	 Exit / Cancel / Clear
 [=].	 Subtitle / EQ	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Source	 AV / Input / RDS
 Home	 Shift + Menu /	 Text	 Text / Goto
 Smart	 Smart / List	 <<	 << / Tune-
 Vol+	 Vol+	 Stop	 Stop / Hold





Original	Replacement	Original	Replacement
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Netflix		Shift + Red / Netflix /
	YouTube		Shift + Yellow / YouTube /
	prime video		Shift + Blue / Prime /
	Google Play		Display / Media

