



Original	Replacement
On/Standby	Power
Mute	Mute / Dimmer
Freeze	Pause / Step / Freeze
R-Click/Menu	D.Menu / Top
Auto Keystone	Setup / OPT /
Input	AV / Input / RDS
Auto Set	Menu / Home
Up/Zoom+	Up
Left	Left
Enter	OK
Right	Right
Cancel	Exit / Cancel / Clear
Down/Zoom-	Down
Vol+	Vol+
↑ (PJ Mode)	CH+ / Page+
Vol-	Vol-
↓ (PJ Mode)	CH- / Page-

Original	Replacement
↑	Shift + Up
↓	Shift + Down
Resize Up	Shift + CH+ /
Resize Down	Shift + CH- /

