







 

 
 










 
 
 




 












Original	Replacement	Original	Replacement
	TIMER AV		0
	Power		Recall
	TV		Vol+
	TV/R		[i+]
	PROG SLEEP		P+
	PICTURE FORMAT		Vol-
	SOUND DUAL		Mute
	AD SUBT		P-
	1		Quick
	2		HOME SMART
	3		SHIFT + SETTINGS OPT
	4		SETTINGS OPT
	5		TEXT
	6		LIST
	7		MENU
	8		SHIFT + 
	9		GUIDE
	SHIFT + AD SUBT		





Original	Replacement	Original	Replacement
	 +  Shift + Left		 Green
	 Left		 Yellow
	 Ok		 Blue
	 Right		
	 +  Shift + Right		
	 Back		
	 Down		
	 Exit		
	 +  Shift + Down		
	 <<		
	 Play		
	 >>		
	 I<<		
	 Stop		
	 Pause		
	 >>I		
	 Red		

