 




Original	Replacement
 Power	 Power
 Open / Close	 Eject / Surround
 OSD	 Display / Media
 1	 1
 2	 2
 3	 3
 Subtitle	 Subtitle / EQ
 4	 4
 5	 5
 6	 6
 Angle	 Info / Angle
 7	 7
 8	 8
 9	 9
 Language	 Audio / Lang I/II
 R/L	 Blue / Prime Video / Random
 0	 0

Original	Replacement
 10+	 Guide / EPG / -/--
 Setup	 Setup / OPT /
 Mute	 Mute / Dimmer
 Clear	 Exit / Cancel / Clear
 Prog	 TV/Radio /
 Time	 Sleep / Timer
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Title	 Sound / Title
 Menu	 Menu / Home
 Default	 AV / Input / RDS
 <<	 << / Tune-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze




























	Original	Replacement	Original	Replacement
		I<< / Preset-		
		>> / Tune+		
		Stop / Hold		
		>> / Preset+		
		Red / Netflix / Search		
		Green / APP / Repeat		
		Yellow / YouTube / Repeat		
		Zoom / Size		
		D.Menu / Top		
		Shift + Pause / Step /		
		Shift + Play /		
		Vol+		
		Smart / List		
		Picture / Format		
		Back / Return		
		Vol-		

















 
 







Original	Replacement	Replacement
On/Off		Power
Audio Off		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Record		Rec / Rec Mode
Rewind		<< / Tune-
F.Forward		>> / Tune+
Prev.		I<< / Preset-
Next		>>I / Preset+
Title		Sound / Title
Audio		Audio / Lang I/II
Subt.		Subtitle / EQ
Open/Close		Eject / Surround
Auto/Track		Picture / Format
Zoom		Zoom / Size
Np		Sleep / Timer

Original	Replacement	Replacement
Progr.		TV/Radio /
Top Menu		D.Menu / Top
Setup		Setup / OPT /
C/CH		Text / Goto
DVD/TV		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Angle		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Pbc		Exit / Cancel / Clear
Menu Down		Down
Return		Back / Return
Volume+		Vol+
Resume		Smart / List
Slow Up		CH+ / Page+























Original	Replacement	Replacement
Volume-		Vol-
Display		Display / Media
Slow Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
+10		Guide / EPG / -/--
0		0
R/L		Fav / Marker / PC
Search		Red / Netflix / Search
Repeat/1/All		Green / APP / Repeat

Original	Replacement	Replacement
Rep/A-B		Yellow / YouTube / Repeat
Shuffle		Blue / Prime Video / Random
Karaoke/Step		Shift + Pause / Step /
Echo+		Shift + Up
Echo-		Shift + Down
3D		Shift + 3
Video		Shift + 4





Original	Replacement	Replacement
On/Off		Power
Audio Off		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Record		Rec / Rec Mode
Rewind		<< / Tune-
F.Forward		>> / Tune+
Prev.		I<< / Preset-
Next		>>I / Preset+
Title		Sound / Title
Lang		Audio / Lang I/II
Subt.		Subtitle / EQ
Open/Close		Eject / Surround
Auto/Track		Picture / Format
Zoom		Zoom / Size
Pbc		Sleep / Timer

Original	Replacement	Replacement
Progr.		TV/Radio /
Top Menu		D.Menu / Top
Setup		Setup / OPT /
Resume		Text / Goto
DVD/TV		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Angle		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Clear/00:00		Exit / Cancel / Clear
Menu Down		Down
Return		Back / Return
Volume+		Vol+
Mode		Smart / List
Slow Up		CH+ / Page+



