

 
 





 







 

 
 
 





 

 

 




Original	Replacement	Original	Replacement
On/Off	 Power	Menu Down	 Down
Mute	 Mute	Back	 Back
Update	 Smart	Volume+	 Vol +
Txt Stop	 Stop	Chan.Up	 Ch +
Subt.List	 Subt	Menu audio	 Dual
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Chan.Down	 Ch -
Menu video	 Format	1	 1
Text	 Text	2	 2
Txt Expand	 Eject	3	 3
TV/AV	 AV	4	 4
Menu	 Menu	5	 5
Menu Up	 Up	6	 6
Display	 Info	7	 7
Menu Left	 Left	8	 8
OK Enter	 Ok	9	 9
Menu Right	 Right	Guide -/-- 1.	 Guide



Original	Replacement	Original	Replacement
0/10	0		
2.Fav P/C 2.	Pre Ch		
Red	Red		
Green	Green		
Yellow	Yellow		
Aft/Caf	Options		
Blue	Blue		
Mix Scan	D. Menu		

