


 



 





 

 




 
 

 







 
 




 





 







 



 

 



 


 
 

 




Original		Replacement		Original		Replacement	
	Standby		Power		TV / Radio		TV/R
	Mute		Mute		Menu		Menu
	1		1		Exit		Exit
	2		2		Up		Up
	3		3		Right		Right
	4		4		Down		Down
	5		5		Left		Left
	6		6		OK		Ok
	7		7		Record		Rec
	8		8		Stop		Stop
	9		9		Vol +		Vol +
	0		0		Vol -		Vol -
	Info		Info		TTX		Text
	Recall		Back		FAV		Pre Ch
	EPG		Guide		CH +		Ch +
	Audio		Dual		CH -		Ch -
	Subtitle		Subt		Media		Media





	Original	Replacement	Original	Replacement
	I<< Prev	 I<<		
	Play	 Play		
	<< Rew	 <<		
	USB	 HOME SMART Smart		
	>>  Next	 >>  >>		
	Pause	    Pause		
	>> Fwd	 >> >>		
	Red	 A Red		
	Green	 B Green		
	Yellow	 C Yellow		
	Blue	 D Blue		

