



| Original  | Replacement | Original  | Replacement       |
|---|-------------|---|-------------------|
|    | POWER       |    | Power             |
|    | INFO        |    | Info / Angle      |
|    | MUTE        |    | Mute / Dimmer     |
|    | 1           |    | 1                 |
|    | 2           |    | 2                 |
|    | 3           |    | 3                 |
|    | 4           |    | 4                 |
|    | 5           |    | 5                 |
|    | 6           |    | 6                 |
|    | 7           |    | 7                 |
|   | 8           |   | 8                 |
|  | 9           |  | 9                 |
|  | SOURCE      |  | AV / Input / RDS  |
|  | 0           |  | 0                 |
|  | AUDIO       |  | Audio / Lang I/II |
|  | FORMAT      |  | Picture / Format  |
|  | BACK        |  | Back / Return     |

| Original  | Replacement | Original  | Replacement            |
|---|-------------|---|------------------------|
|    | MENU        |    | Menu / Home            |
|    | EXIT        |    | Exit / Cancel / Clear  |
|    | UP          |    | Up                     |
|    | LEFT        |    | Left                   |
|    | ENTER       |    | OK                     |
|    | RIGHT       |    | Right                  |
|    | VOL+        |    | Vol+                   |
|    | DOWN        |    | Down                   |
|    | CH+         |    | CH+ / Page+            |
|    | VOL-        |    | Vol-                   |
|   | CH-         |   | CH- / Page-            |
|  | LIST        |  | Smart / List           |
|  | SLEEP       |  | Sleep / Timer          |
|  | EPG         |  | Guide / EPG / -/-      |
|  | FAV         |  | Fav / Marker / PC      |
|  | <<          |  | << / Tune-             |
|  | RED         |  | Red / Netflix / Search |



