



Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Exit	 Exit / Cancel / Clear
 Nicam/A2	 Shift + Audio / Lang I/II	 1	 1
 Sleep	 Sleep / Timer	 2	 2
 Aspect	 Shift + Picture / Format	 3	 3
 Media	 Shift + Display / Media	 4	 4
 Display	 Display / Media	 5	 5
 Auto	 Smart / List	 6	 6
 P.Mode	 Picture / Format	 7	 7
 S.Mode	 Sound / Title	 8	 8
 DTV	 D.Menu / Top	 9	 9
 Source	 AV / Input / RDS	 0	 0
 Up	 Up	 -/--	 Shift + Guide / EPG / -/--
 Left	 Left	 Recall	 Back / Return
 Enter	 OK	 CH+	 CH+ / Page+
 Right	 Right	 Info	 Info / Angle
 Down	 Down	 Audio	 Audio / Lang I/II





Original	Replacement	Original	Replacement
Vol+	Vol+	Stop	Stop / Hold
CH-	CH- / Page-	Rec/Repeat	Rec / Rec Mode
FAV	Fav / Marker / PC	Rec/Repeat	Shift + Green / APP / APP /
Tv/Radio	TV/Radio /	T-Shift	Eject / Surround
Vol-	Vol-	Red	Red / Netflix / Search
Text	Text / Goto	Green	Green / APP / Repeat
EPG	Guide / EPG / -/--	Yellow	Yellow / YouTube / Repeat
Subtitle	Subtitle / EQ	Cyan	Blue / Prime Video / Random
Index	Setup / OPT /		
<</Hold	<< / Tune-		
<</Hold	Shift + Stop /		
Size	Zoom / Size		
>>	>> / Tune+		
I<</Reveal	I<< / Preset-		
>>I/Subpage	>>I / Preset+		
Play	Play / Slow		
Pause	Pause / Step / Freeze		

