


 






 

 

 












 







 



 








	Original	Replacement		Original	Replacement
	Power		Power		Exit
	Mute		Mute		Up
	1		1		Down
	2		2		Right
	3		3		Left
	4		4		Ok
	5		5		Vol +
	6		6		Vol -
	7		7		Shift + Dual
	8		8		Format
	9		9		Ch +
	0		0		Ch -
	Audio		Dual		Sleep
	Recall		Back		Aspect
	Tv Menu		Menu		Options
	Source		AV		Media
	CH List		List		Text





	Original	Replacement		Original	Replacement
	EPG	 Guide		I<<	 I<<
	FAV	 Pre Ch		>>I	 >>I
	Info	 Info		Play	 Play
	Red	 Red		Pause	 Pause
	Green	 Green		Stop	 Stop
	Yellow	 Yellow		Rec/Rep	 Rec
	Blue	 Blue			
	DTV	 TV/R			
	Hold	 Eject			
	List	 Shift + List			
	Subpage	 Shift + Subt			
	Index	 Smart			
	PVR List	 D. Menu			
	Mix	 Shift + 3D			
	Subtitle	 Subt			
	<<	 <<			
	>>	 >>			

