




	Original	Replacement		Original	Replacement
	PLII PARA.	D. Menu		Display / Sleep	Sleep
	Adjust -	+ Shift + Down		Return /	Back
	DSP -	+ Shift + Left		Stop / P.Scan	Stop
	Power	Power		<< / Tune -	<<
	CH/Level Up	Ch +		>> / Tune +	>>
	CH/Level Down	Ch -		I<< / Preset -	I<<
	Vol+	Vol +		>>I / Preset +	>>I
	Vol-	Vol -		1 / Tuner	1
	Mute	Mute		2 / CD	2
	Up / PTY Select	Up		3 / AUX	3
	Down / Search M.	Down		4 / Tape	4
	Right / EON PTY	Right		5	5
	Left / EON TA	Left		6 / Video 1	6
	Enter / RDS	Ok		7 / Video 2	7
	Setup / OSD	Options		8 / Video 3	8
	Menu / T.Tone	Menu		9	9
	Display / Sleep	Info		0	0





Original	Replacement
 Adjust +	 Shift + Up
 7CH Dir	 3D
 CH Sel / T/V	 TV/R
 SPK SET	 Exit
 Auto	 Subt
 DSP +	 Shift + Right
 Stereo	 Dual
 CD	 Green
 AUDIO	 Red
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 SAT	 Shift + Blue
 CABLE	 Shift + Yellow
 DVD	 Shift + Green
 AUX Power /	 Shift + Power
 AUX Rec	 Shift + Rec

Original	Replacement
 AUX Pause	 Shift + Pause
 AUX Play	 Shift + Play
 AUX Stop / P.Scan	 Shift + Stop
 AUX << / Tune	 Shift + <<
 AUX >> / Tune	 Shift + >>
 AUX >> / Preset	 Shift + >>
 AUX << / Preset -	 Shift + <<






Original	Replacement
AUDIO	A Red
CD	B Green
AUX	C Yellow
TV	D Blue
VCR	SHIFT + A Shift + Red
DVD	SHIFT + B Shift + Green
CABLE	SHIFT + C Shift + Yellow
SAT	SHIFT + D Shift + Blue
TV Power	Power Power
TV CH/Level +	+ Ch +
TV CH/Level -	- Ch -
TV CH Sel. / T/V	Media Media
TV Mute	MUTE Mute
TV Volume +	+ Vol +
TV Volume -	- Vol -
TV 1	1 1
TV 2	2 2

Original	Replacement
AUX TV 3	3 3
TAPE TV 4	4 4
TV 5	5 5
VIDEO1 TV 6	6 6
VIDEO2 TV 7	7 7
VIDEO3 TV 8	8 8
TV 9	9 9
TV 0	0 0
CABLE Power	SHIFT + Power Shift + Power
CABLE CH/Level +	SHIFT + + Shift + Ch +
CABLE CH/Level -	SHIFT + - Shift + Ch -
CABLE CH Sel.	SHIFT + HOME SMART Shift + Smart
CABLE Mute	SHIFT + MUTE Shift + Mute
CABLE Volume	SHIFT + + Shift + Vol +
CABLE Volume -	SHIFT + - Shift + Vol -
CABLE 1	SHIFT + 1 Shift + 1
CABLE 2	SHIFT + 2 Shift + 2





Original	Replacement
 AUDIO	 Red
 CD	 Green
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 DVD	 Shift + Green
 SAT	 Shift + Blue
 CABLE	 Shift + Yellow
 DVD Power	 Power
 DVD Menu /	 Menu
 DVD Audio Sel.	 Dual
 DVD Subtitle	 Subt
 DVD Zoom	 3D
 DVD OSD	 Format
 DVD Up	 Up
 DVD Left	 Left
 DVD Enter	 Ok

Original	Replacement
 DVD Right	 Right
 DVD Down	 Down
 DVD Display	 Info
 DVD Pause	 Pause
 DVD Play	 Play
 DVD Stop / P.Scan	 Stop
 DVD <<	 <<
 DVD >>	 >>
 DVD I<<	 I<<
 DVD >>I	 >>I
 DVD 1	 1
 DVD 2	 2
 DVD 3	 3
 DVD 4	 4
 DVD 5	 5
 DVD 6	 6
 DVD 7	 7





	Original	Replacement	
VIDEO3 8	DVD 8	8	8
9	DVD 9	9	9
0	DVD 0	0	0
POWER ORANGE	SAT Power	SHIFT + POWER	Shift + Power
CH/LEVEL UP	SAT CH/Level +	SHIFT + CH +	Shift + Ch +
CH/LEVEL DOWN	SAT CH/Level -	SHIFT + CH -	Shift + Ch -
CH SEL T/V	SAT CH Sel.	SHIFT + APP MEDIA	Shift + Media
MUTE	SAT Mute	SHIFT + MUTE	Shift + Mute
VOLUME UP	SAT Volume +	SHIFT + + VOL	Shift + Vol +
VOLUME DOWN	SAT Volume -	SHIFT + - VOL	Shift + Vol -
TUNER 1	SAT 1	SHIFT + 1	Shift + 1
CD 2	SAT 2	SHIFT + 2	Shift + 2
AUX 3	SAT 3	SHIFT + 3	Shift + 3
TAPE 4	SAT 4	SHIFT + 4	Shift + 4
5	SAT 5	SHIFT + 5	Shift + 5
VIDEO1 6	SAT 6	SHIFT + 6	Shift + 6
VIDEO2 7	SAT 7	SHIFT + 7	Shift + 7

	Original	Replacement	
VIDEO3 8	SAT 8	SHIFT + 8	Shift + 8
9	SAT 9	SHIFT + 9	Shift + 9
0	SAT 0	SHIFT + 0	Shift + 0





Original	Replacement
 AUDIO	 Red
 CD	 Green
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 SAT	 Shift + Blue
 CABLE	 Shift + Yellow
 DVD	 Shift + Green
 CD Pause	 Pause
 CD Play	 Play
 CD Stop	 Stop
 CD I<<	 I<<
 CD >>I	 >>I
 CD 1	 1
 CD 2	 2
 CD 3	 3
 CD 4	 4

Original	Replacement
 CD 5	 5
 CD 6	 6
 CD 7	 7
 CD 8	 8
 CD 9	 9
 CD 0	 0
 VCR Power	 Shift + Power
 VCR CH Sel.	 Shift + Media
 VCR Rec	 Shift + Rec
 VCR Play	 Shift + Play
 VCR Mute	 Shift + Mute
 VCR >>	 Shift + >>
 VCR <<	 Shift + <<
 VCR Volume -	 Shift + Vol -
 VCR Volume +	 Shift + Vol +
 VCR CH+	 Shift + Ch +
 VCR CH-	 Shift + Ch -



