































 






















 
















Original	Replacement	Original	Replacement
	OSD		Angle
	Search		Info / Angle
	Mute		Audio / Lang I/II
	Source		Audio
	1		PBC
	2		D.Menu / Top
	3		Title
	4		Sound / Title
	5		Up
	6		Up
	7		Stop / Hold
	8		Stop / Hold
	9		Play / Slow
	0		Play / Slow
	10+		Pause / Step / Freeze
	Step		Pause / Step / Freeze
	Subtitle		Left
	Smart / List		Left
	Red / Netflix / Search		Enter
	Mute / Dimmer		OK
	AV / Input / RDS		Right
	1		Right
	2		Slow
	3		Shift + Play /
	4		Setup
	5		Setup / OPT /
	6		Down
	7		Down
	8		Zoom
	9		Zoom / Size
	0		Menu
	Guide / EPG / -/--		Menu / Home
	Shift + Pause / Step /		Repeat
	Subtitle / EQ		Green / APP / Repeat



