











 


 

 














 





Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Subtl	 Subt
 Tv/SAT	 TV/R
 16:9	 Format
 Timer	 AV
 Menu	 Menu

Original	Replacement
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 TXT	 Text
 EPG	 Guide
 Info	 Info
 Audio	 Dual
 M-P	 Media
 ↑	 >>
 ↓	 <<





Original	Replacement	Original	Replacement
 FAV	 Pre Ch		
 Recall	 Back		
 Red/SAT	 Red		
 Green/Zoom	 Green		
 Yellow/Pause	 Yellow		
 Blue/Tv/Radio	 Blue		

Original	Replacement

